

POLYDOME CALF WARMER INSTRUCTIONS

Calf Warmer Includes: The Top Section, the Bottom sled section, the support bar & cross strap, 2 pieces of flooring, the heater & 3 Safety Snaps to hold the top to the lower section.

1: Unpack the heater and plug it in and let it burn off an packing oils there may be on the unit.

2: Set the temperature control where you think it should be and put the heater into the calf warmer through the hole in the back of the lower section. Place the top section in place and get an idea of where the control needs to be set to get the temperature you want for the calf.

3: When you put the calf in the unit put the head of the calf at the same end as the heater and adjust the air vent/peep hole. Check the unit often while the calf is in it to make sure you have the temperature set where you want it.

The temperature and the length of time you leave the calf in the unit is up to you.

Options: Rubber Floor Mat, Thermometer, Second Fan

You may want to put a thermometer in the unit so you can watch what the temperature is while you have a calf in the unit. There are several different types you can use.

The 1" Dial thermometer with a probe works well you just drill a small hole for the probe and drop it in, if the calf bumps it, it will move or pop out.

If you use a small out door thermometer you may want to shield it so the calf can not bump into it and brake the tube.

There is a rubber floor mat available to help the calf from slipping. It come in 12" square section that snap together to hold them in place. They cover 2' wide X 3' long. This flooring also has hole in it to let the heat through.

There is an axle fan that can be put into the unit for extra air movement to dry the calf faster. It would mount on the opposite end as the peep hole.

Limited Warranty

We warranty each product to be free from defects in material and workmanship for a period of one year from the date of purchase. We make no other express warranties, and all implied warranties including fitness, are limited to one year from date of purchase. With in warranty period we will repair or replace any part found to be defective upon our examination, but we will not pay shipping cost or other expenses.

This warranty shall not apply to any product that has been subject to misuse, negligence or accident, or damage in shipment or which has been modified or repaired by unauthorized persons.

This warranty only applies to product s owned by persons purchasing directly from Poly-tank or our approved distributors and merchandisers.

Note: Limitations on duration of implied warranty and/ or consequential damage may not apply to you if your state does not permit them.

This warranty gives you specific legal rights in addition to rights which you may have under state law.

WARNING PLUG THE UNIT INTO A PROPER GROUND FAULT PLUG IN



Calf Warmer Complete



Vent/Peep hole for proper ventilation & allows you to view the calf easily.



Deluxe High Performance 110 Volt 2 Speed Heater for maximum out put.



The PolyDome Calf Warmer provides a comfortable environment for newborn calves.

- (1): The temperature is what you feel the calf should be and the time you want to dry the calf in.
- (2): Most of the time the calf will only be in the unit for several hours.
You could leave the calf in over night if you have the temperature set right.
- (3): We do not have cartons for the Calf Warmers. If you would like a carton for ea unit we would need to requote the price.
- (4): These Units can be use for almost an animal that people may want to put into a heated unit for the first few hours or a sick animal that they feel needs a little help.